

# IPC - Overview Accessories

Type	FOCUS.FL	BeBo1(3).FL	DIALOG3(6)	TERMINAL	BASIC1(3).CFL	VISCO.CFL	VARIO.FL	ALPHA	CARAT	ECCO/ECCO-Box
<b>Floppy disk (internal)</b>	- Floppy disk 3 1/2"	- Floppy disk 3 1/2"	-	-	- Floppy disk 3 1/2"	-	-	- Floppy disk 3 1/2"	-	-
<b>Floppy disk (external)</b>	- with connection to an optional interface - at 37pin Sub-D plug - incl. cable 0.5 m - incl. Floppy cover IP65 and cable 0.5 m - external Floppy USB	- with connection to an optional interface - at 37pin Sub-D plug - incl. cable 0.5 m - incl. Floppy cover IP65 and cable 0.5 m - external Floppy USB	- external Floppy USB	-	- with connection to an optional interface - at 37pin Sub-D plug - incl. cable 0.5 m - incl. Floppy cover IP65 and cable 0.5 m - external Floppy USB	- with connection to an optional interface - at 37pin Sub-D plug - incl. cable 0.5 m - incl. Floppy cover IP65 and cable 0.5 m - external Floppy USB	- external Floppy USB	- with connection to an optional interface - at 37pin Sub-D plug - incl. cable 0.5 m - incl. Floppy cover IP65 and cable 0.5 m - external Floppy USB	- external Floppy USB	- external Floppy USB
<b>CD drive unit (internal)</b>	- internal CD-ROM slimline	- internal CD-ROM slimline	- internal CD-ROM slimline - internal CD-ROM	-	- internal CD-ROM slimline	-	- internal CD-ROM slimline	- internal CD-ROM slimline	-	-
<b>CD drive unit (external)</b>	- external CD-ROM - CD-ROM drive unit USB	- external CD-ROM - CD-ROM drive unit USB	- external CD-ROM - CD-ROM drive unit USB	-	- external CD-ROM - CD-ROM drive unit USB	- external CD-ROM - CD-ROM drive unit USB	- CD-ROM drive unit USB	- external CD-ROM - CD-ROM drive unit USB	- CD-ROM drive unit USB	- CD-ROM drive unit USB
<b>CD burner (internal)</b>	- internal CD-RW slimline	- internal CD-RW slimline	- internal CD-RW slimline - internal CD-RW	-	- internal CD-RW slimline	-	- internal CD-RW slimline	- internal CD-RW slimline	-	- internal CD-RW slimline
<b>Interface module</b>	- RS232 for COM3/4 - RS485 for COM3/4 - 20mA TTY for COM3/4	- RS232 for COM3/4 - RS485 for COM3/4 - 20mA TTY for COM3/4	- RS232 for COM3/4 - RS485 for COM3/4 - 20mA TTY for COM3/4	-	- RS232 for COM3/4 - RS485 for COM3/4 - 20mA TTY for COM3/4	- RS232 for COM3/4 - RS485 for COM3/4 - 20mA TTY for COM3/4	- RS232 for COM3/4 - RS485 for COM3/4 - 20mA TTY for COM3/4	- RS232 for COM3/4 - RS485 for COM3/4 - 20mA TTY for COM3/4	- RS232 for COM3/4 - RS485 for COM3/4 - 20mA TTY for COM3/4	-
<b>Fieldbus module MSC</b>	- COM PCB module EC1 - PROFIBUS-DP Master - PROFIBUS-DP Slave - CANopen Master - CANopen Slave	- COM PCB module EC1 - PROFIBUS-DP Master - PROFIBUS-DP Slave - CANopen Master - CANopen Slave	- COM PCB module EC1 - PROFIBUS-DP Master - PROFIBUS-DP Slave - CANopen Master - CANopen Slave	-	- COM PCB module EC1 - PROFIBUS-DP Master - PROFIBUS-DP Slave - CANopen Master - CANopen Slave	- COM PCB module EC1 - PROFIBUS-DP Master - PROFIBUS-DP Slave - CANopen Master - CANopen Slave	- COM PCB module EC1 - PROFIBUS-DP Master - PROFIBUS-DP Slave - CANopen Master - CANopen Slave	- COM PCB module EC1 - PROFIBUS-DP Master - PROFIBUS-DP Slave - CANopen Master - CANopen Slave	- COM PCB module EC1 - PROFIBUS-DP Master - PROFIBUS-DP Slave - CANopen Master - CANopen Slave	- COM PCB module EC1 - PROFIBUS-DP Master - PROFIBUS-DP Slave - CANopen Master - CANopen Slave
<b>Fieldbus adapter Hilscher</b>	- PROFIBUS-DP FMS: Combimaster - PROFIBUS-DP: Master/Slave connection - PROFIBUS-FMS: Master connection - CANopen: Master/Slave connection - InterBus: Master/Slave connection	- PROFIBUS-DP FMS: Combimaster - PROFIBUS-DP: Master/Slave connection - PROFIBUS-FMS: Master connection - CANopen: Master/Slave connection - InterBus: Master/Slave connection	- PROFIBUS-DP FMS: Combimaster - PROFIBUS-DP: Master/Slave connection - PROFIBUS-FMS: Master connection - CANopen: Master/Slave connection - InterBus: Master/Slave connection	-	- PROFIBUS-DP FMS: Combimaster - PROFIBUS-DP: Master/Slave connection - PROFIBUS-FMS: Master connection - CANopen: Master/Slave connection - InterBus: Master/Slave connection	- PROFIBUS-DP FMS: Combimaster - PROFIBUS-DP: Master/Slave connection - PROFIBUS-FMS: Master connection - CANopen: Master/Slave connection - InterBus: Master/Slave connection	- PROFIBUS-DP FMS: Combimaster - PROFIBUS-DP: Master/Slave connection - PROFIBUS-FMS: Master connection - CANopen: Master/Slave connection - InterBus: Master/Slave connection	- PROFIBUS-DP FMS: Combimaster - PROFIBUS-DP: Master/Slave connection - PROFIBUS-FMS: Master connection - CANopen: Master/Slave connection - InterBus: Master/Slave connection	- PROFIBUS-DP FMS: Combimaster - PROFIBUS-DP: Master/Slave connection - PROFIBUS-FMS: Master connection - CANopen: Master/Slave connection - InterBus: Master/Slave connection	- PROFIBUS-DP FMS: Combimaster - PROFIBUS-DP: Master/Slave connection - PROFIBUS-FMS: Master connection - CANopen: Master/Slave connection - InterBus: Master/Slave connection
<b>Plug-in cards ISA</b>	-	- Ethernet - EtherLink - 2 x RS232 - 2 x RS422/485 - 1 x LPT - PCMCIA	- Ethernet - EtherLink - 2 x RS232 - 2 x RS422/485 - 1 x LPT - PCMCIA	-	- Ethernet - EtherLink - 2 x RS232 - 2 x RS422/485 - 1 x LPT - PCMCIA	- Ethernet - EtherLink - 2 x RS232 - 2 x RS422/485 - 1 x LPT - PCMCIA	-	- Ethernet - EtherLink - 2 x RS232 - 2 x RS422/485 - 1 x LPT - PCMCIA	-	-
<b>Plug-in cards PCI</b>	-	- Ethernet - EtherLink - 2 x RS232 - 2 x RS422/485 - Modem 56k v. 90	- Ethernet - EtherLink - 2 x RS232 - 2 x RS422/485 - Modem 56k v. 90	-	- Ethernet - EtherLink - 2 x RS232 - 2 x RS422/485 - Modem 56k v. 90	- Ethernet - EtherLink - 2 x RS232 - 2 x RS422/485 - Modem 56k v. 90	-	- Ethernet - EtherLink - 2 x RS232 - 2 x RS422/485 - Modem 56k v. 90	- Ethernet - EtherLink - 2 x RS232 - 2 x RS422/485 - Modem 56k v. 90	-
<b>Keyboard / Mouse</b>	- Mouse Panel - My-T-Soft - Right-Touch-Utilities	- Mouse Panel - My-T-Soft - Right-Touch-Utilities	- Mouse Panel - My-T-Soft - Right-Touch-Utilities	-	- Mouse Panel - My-T-Soft - Right-Touch-Utilities	- Mouse Panel - My-T-Soft - Right-Touch-Utilities	- Mouse Panel - My-T-Soft - Right-Touch-Utilities	- Mouse Panel - My-T-Soft - Right-Touch-Utilities	- Mouse Panel - My-T-Soft - Right-Touch-Utilities	- Mouse Panel - My-T-Soft - Right-Touch-Utilities
<b>RAID Controller X</b>	-	- RAID Controller	- RAID Controller	-	- RAID-Controller	- RAID-Controller	-	- RAID-Controller	-	-
<b>USV</b>	- DC USV 24 V	- DC USV 24 V	- AC USV 230 V	-	- DC USV 24 V	- DC USV 24 V	- DC USV 24 V	- DC USV 24 V	- DC USV 24 V	- AC USV 230 V
<b>Software</b>	- DIAGNOSTIC TOOL	- DIAGNOSTIC TOOL	- DIAGNOSTIC TOOL	-	- DIAGNOSTIC TOOL	- DIAGNOSTIC TOOL	- DIAGNOSTIC TOOL	- DIAGNOSTIC TOOL	- DIAGNOSTIC TOOL	-
<b>Cable extension</b>	-	-	-	- Repeater Box - Eutler cable - Cable/display cable length: - 10"/12" - bis 50 m - 15" - bis 40 m - 18" - bis 25 m	-	-	-	-	-	-