

Z-PC Line

EN

ZC-24DO

CANopen I/O Module: 24 Digital Outputs

Installation Manual

Contents:

- General Specifications
- Technical Specifications
- Installation Rules
- Electrical connections
- DIP-switches settings
- Programming
- Significant Components Position
- Leds Signallings
- Accessories



SENECA s.r.l.

Via Germania, 34 - 35127 - Z.I. CAMIN - PADOVA - ITALY

Tel. +39.049.8705355 - 8705359 - Fax +39.049.8706287

For manuals, EDS files and configuration software, see www.seneca.it

This document is property of SENECA srl. Duplication and reproduction are forbidden, if not authorized. Contents of the present documentation refers to products and technologies described in it. All technical data contained in the document may be modified without prior notice Content of this documentation is subject to periodical revision.

General Specifications

- 24 Mosfet Digital Outputs with shared negative pole, 5 - 30 V_{DC} collectively supplied .
- Digital outputs available both by terminals and IDC10/ IDC20 connectors to facilitate the connection to external relays.
- Can Interface with CANopen protocol: up to 1 Mbps speed.
- CANopen Baud rate and Node ID configurability by DIP-switches or software.
- RS232 Serial Communication with MODBUS-RTU protocol.
- Facilitated power supply and CANopen bus wiring by means of the bus housed in the DIN rail.
- 1500 V_{AC} Isolation among input, power supply and CAN interface circuits.
- Overtemperature and short-circuit to ground of digital outputs continuous monitoring and consequent fault condition signalling.
- Outputs value in case of no communication or fault condition: programmable value or last set value.
- Leds Signallings: Power Supply, Digital Outputs State, CAN Communication, MODBUS-RTU Communication, Outputs fault.

Technical Specifications

| OUTPUTS | |
|--------------------------------------|------------------------------------|
| Numbers of Channels | 24 |
| Outputs Type | MOSFET (Open Source) |
| Power Supply Voltage | 5 - 30 V _{DC} |
| Maximum current (for each output) | 0.5 A (connection from terminals) |
| | 25 mA (connection from connectors) |
| RDS on | 0.75 Ω |
| ON/OFF delay | Max 1 ms |
| POWER SUPPLY | |
| Voltage | 10 - 40 V _{DC} |
| | 19 - 28 V _{AC} |
| Consumption | Typical: 1.5 W, Max: 2.5 W |
| ENVIRONMENTAL CONDITIONS | |
| Temperature | -10 - +65°C |

| | |
|---------------------|----------------------------------|
| Humidity | 30 - 90% at 40°C non condensing. |
| Altitude | up to 2000 m a.s.l |
| Storage Temperature | -20 - +85°C |
| Protection | IP20 |



CONNECTIONS

| | |
|---------------------------|--|
| Removable Terminals | 4-way screw terminals (3.5 mm pitch): outputs. |
| Rear IDC10 Connector | CAN Interface and power supply (for DIN rail). |
| IDC10 / IDC20 Connectors | Outputs (on the rear, alternatively to terminals). |
| Stereophonic frontal jack | 3.5 mm; RS232 (COM). |

DIMENSIONS / BOX

| | |
|------------|--------------------------------|
| Dimensions | L: 100 mm, H: 112 mm, W: 35 mm |
| Box | PBT, black |

ISOLATIONS / STANDARDS
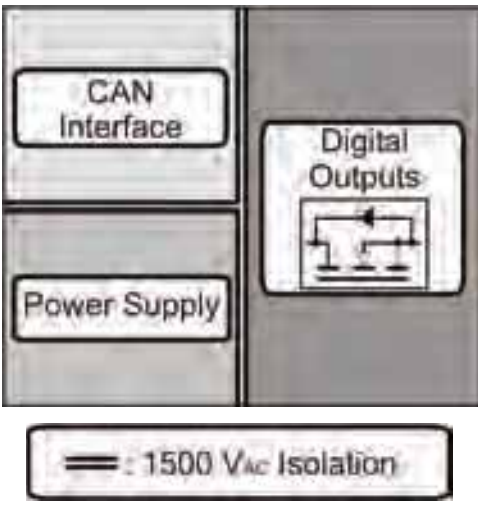
| | |
|--|---|
| <p>Isolation Diagram: 3-Point 1500 V_{AC} Isolation</p>  | <p style="text-align: center;">Standards</p> <div style="display: flex; align-items: center;">  <p>The module complies with the following standards:</p> </div> <ul style="list-style-type: none"> EN61000-6-4/2002-10 (electromagnetic emission, industrial environment). EN61000-6-2/2006-10 (electromagnetic immunity, industrial environment). EN61010-1/2001 (safety). <p>All circuits must be isolated from the other circuits under dangerous voltage with double isolation. The power supply transformer must comply with EN60742: "Isolated transformers and safety transformers".</p> |
|--|---|


Installation Rules

The module is designed to be installed in vertical position on a DIN 46277 rail. In order to ensure optimum performance and the longest working life, the module(s) must be supplied adequate ventilation and no raceways or other objects that obstruct the ventilation slots. Never install modules above sources of heat; we recommend installation in the lower part of the control panel.

Inserting on the DIN rail

As it is illustrated in the next figure:

- 1) Insert the rear IDC10 connector on a DIN rail free slot (the inserting is univocal since the connectors are polarized).
- 2) Tighten the two locks placed at the sides of the rear IDC10 connector to fix the module.

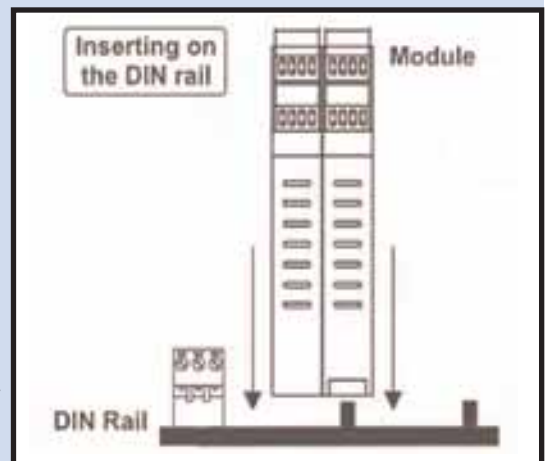


Electrical Connections

POWER SUPPLY AND CAN INTERFACE


Power Supply and CAN interface are available by using the bus for the Seneca DIN rail, by the rear IDC10 connector or by Z-PC-DINAL-B accessory (see *Accessories*).

Rear Connector (IDC10)

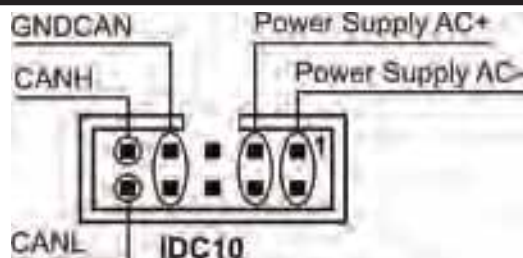

In the figure the meaning of the IDC10 connector pins is showed, in the case the user decides to provide the signals directly through it.

Z-PC-DINAL-B Accessory Use

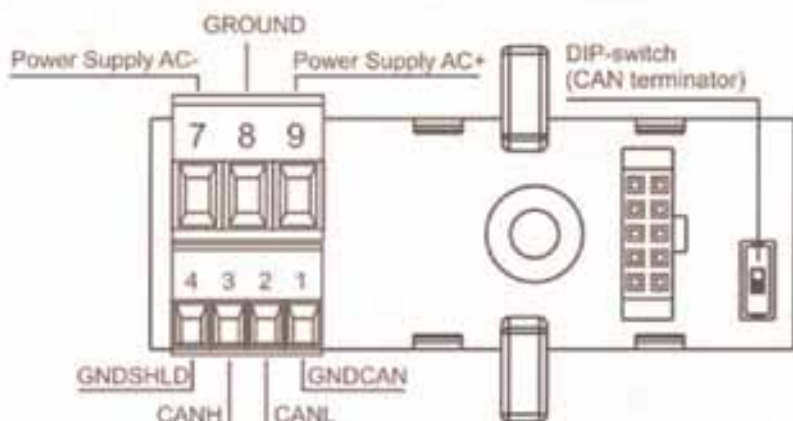

In case of Z-PC-DINAL-B accessory use, the signals may be provided by terminal blocks. The figure shows the meaning of the terminals and the position of the DIP-switch (present on each DIN rail supports listed on *Accessories*) for CAN network termination.


GNDSHLD: Shield to protect the connection cables (always

CAN bus Connection Rules

- 1) Install the modules on the DIN rail (max 120).
- 2) Connect the remote modules using cables of proper length. On the table the following data about the cables length are provided:
 - Bus Length*: CAN network maximum length as a function of the Baud rate. It is the length of the cables which connect the two bus terminators modules (see *Scheme 1*).
 - Drop Length*: maximum length of a drop line (see *Scheme 1*) as a function of the Baud Rate.

| Baud rate | Bus Length | Drop Length |
|-----------|------------|-------------|
| 20 kbps | 2500 m | 150 m |
| 50 kbps | 1000 m | 60 m |
| 125 kbps | 500 m | 5 m |
| 250 kbps | 250 m | 5 m |
| 500 kbps | 100 m | 5 m |
| 800 kbps | 50 m | 3 m |
| 1000 kbps | 25 m | 0.3 m |

Scheme 1

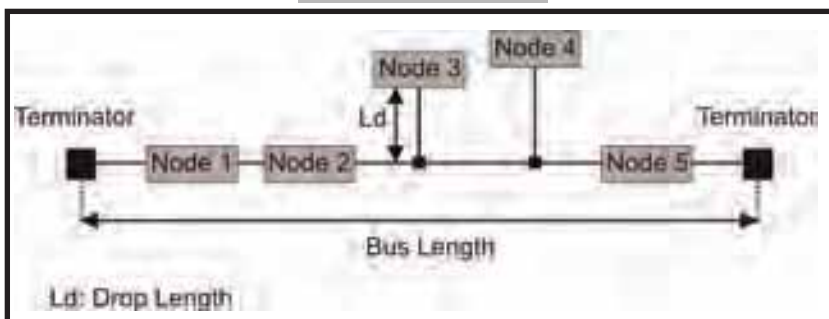


For the best performances, the use of special shielded cables is recommended (**BELDEN 9841** cable for example).

- 3) Terminate the two ends of the CANbus network by setting to ON the DIP-switch present on the DIN rail connection supports (see *Accessories*) where the two ends are inserted.

DIGITAL OUTPUTS

Digital Outputs Connections from terminals

The total current entering on power supply terminal must be limited to **12 A** with quick-break fuse or equivalent protection.

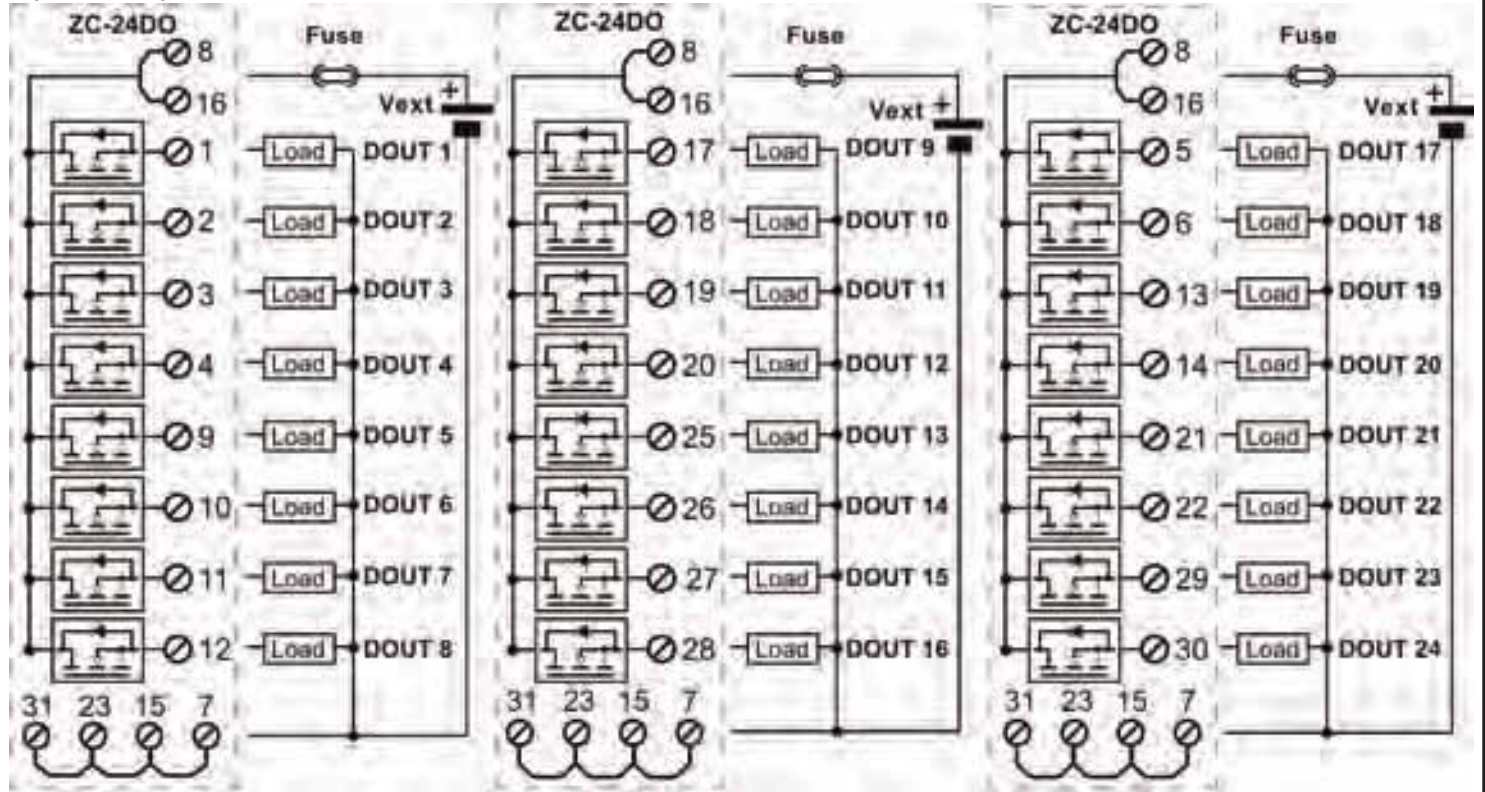

Max Vext: 30 V_{DC}, Max Current (for each output): 0.5 A




Digital Outputs Connections from connectors (module rear side)

Connection suggested to supply 24 V relays. The total current entering on power supply terminal must be limited to **0.6 A** with quick-break fuse or equivalent protection. **Max. current for each output: 25 mA.**

IDC10: DOUT 17..DOUT 24




IDC20: DOUT 1..DOUT 16

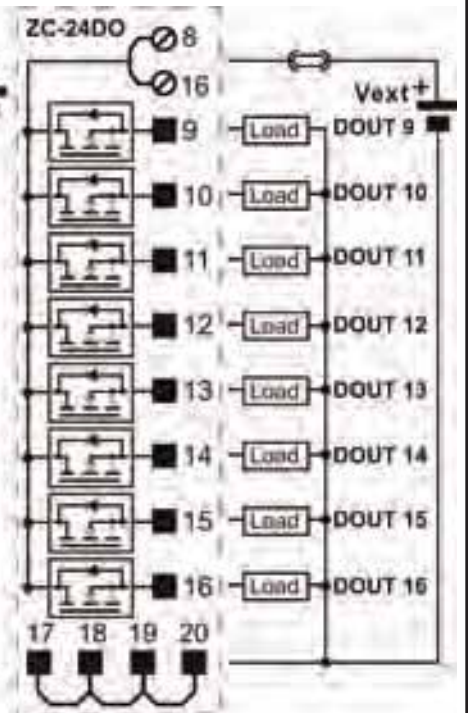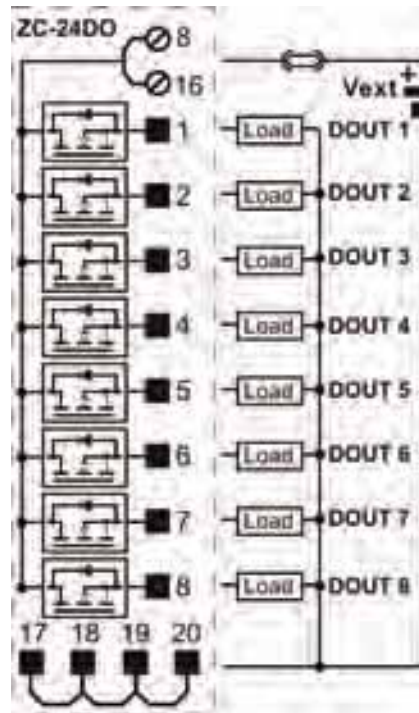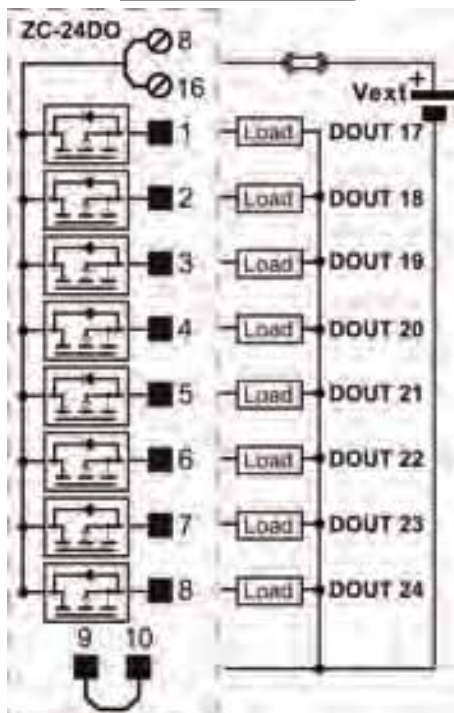

○ : Terminal ■ : IDC10 Connector PIN

Max Vext: 30 V

RS232 SERIAL PORT

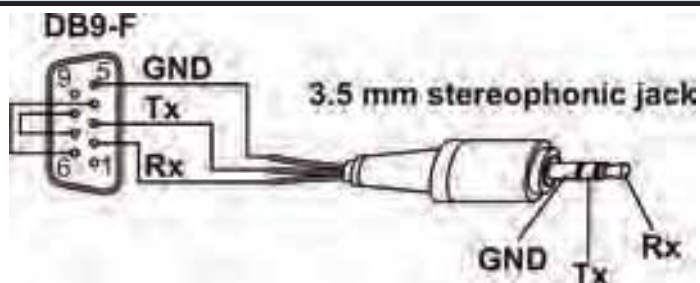


The connection cable DB9 with a 3.5 mm stereophonic jack, can be assembled as indicated in the following figure, or can be bought as an accessory (see *Accessories*).

DIP-switches Settings

The DIP-switches position defines the module CAN communication parameters: Address and Baud Rate. In the following figure the Baud Rate and Address values are listed as a function of the DIP-switches position:

| BAUD RATE | | | ADDRESS | | | | | | | | |
|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|---------|---------------------------------------|
| 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | | |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 0000000 | Address from memory |
| <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 0000001 | Address: 001 |
| <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 0000010 | Address: 002 |
| <input type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 0000011 | Address: 003 |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 0000100 | Address: 004 |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 0000101 | Address: 005 |
| <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | | Address as from binary representation |
| <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 1111111 | Address: 127 |



We underline that on all the DIN rail supports listed on *Accessories* a DIP-switch is present and if it is set to ON position the CAN network termination is inserted.

Programming

PROGRAMMING THROUGH CAN INTERFACE

The module may be programmed/configured through the CAN interface; refer to the *User Manual* for details about the communication.

Factory CAN Parameters

With all the DIP-switches in OFF position (values from memory), the module is originally programmed as follows:

Baud Rate: 20 kbps, Address: 1

PROGRAMMING THROUGH RS232

The module may be programmed/configured through the RS232 interface by using MODBUS-RTU protocol; refer to the *User Manual* for details about the communication.


The connection parameters are the following:

Address: 1, Baud Rate: 2400 Baud, Parity: none, Stop bit: 1.

Significant Components Position

TERMINALS/LEDS/CONNECTORS/DIP-SWITCHES

The terminals numbering, the leds position on the frontal panel, the IDC10 / IDC20 connectors and the DIP-switch on the rear side are illustrated below.

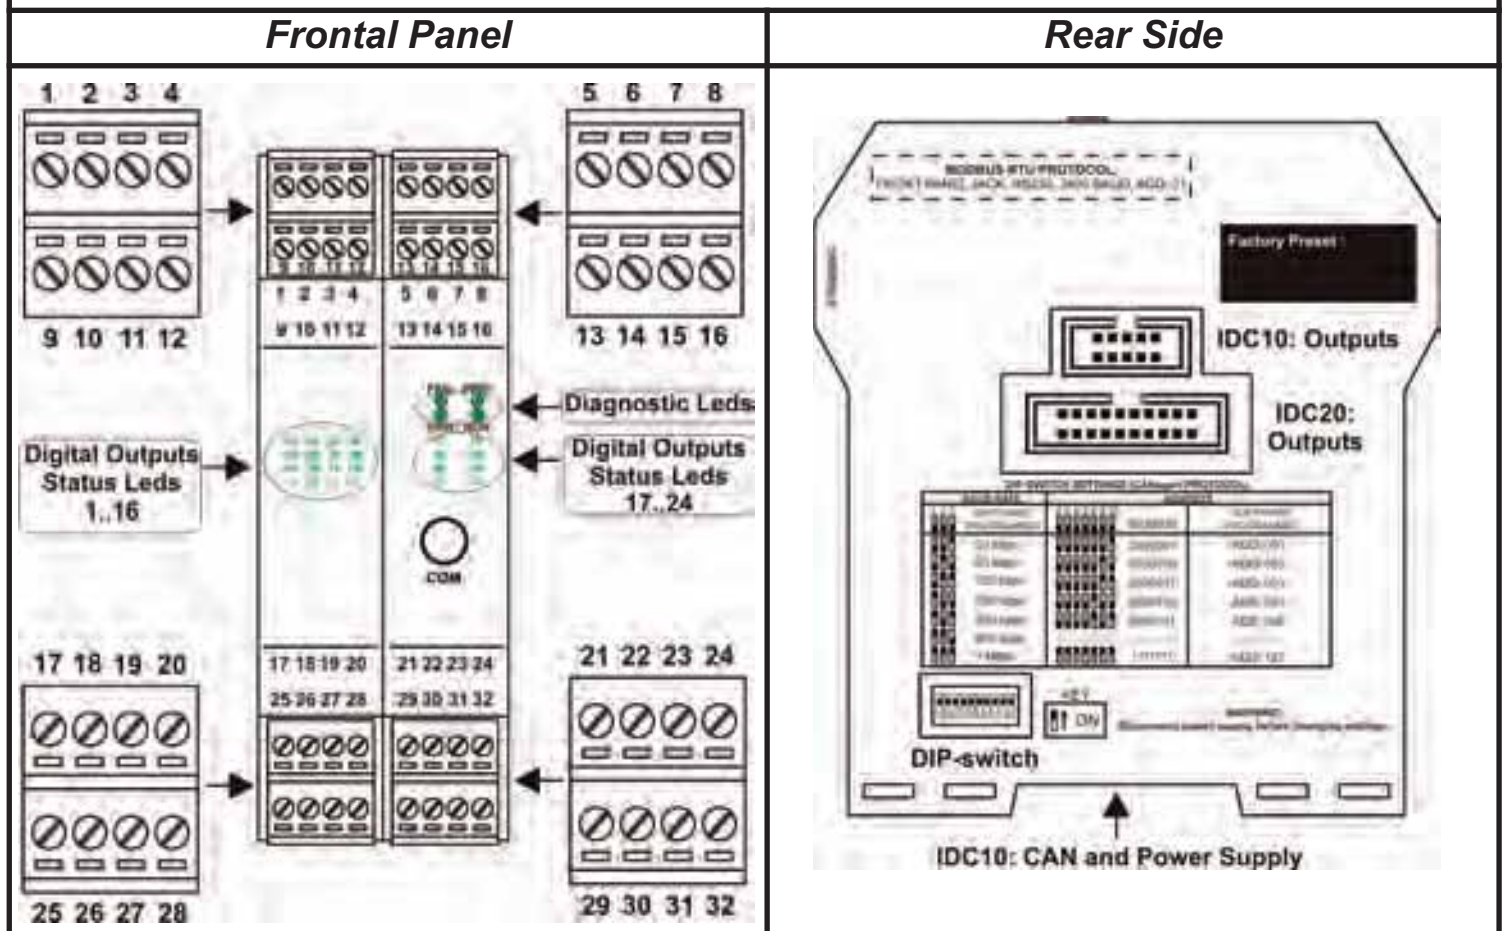

Leds Signallings

LEDS ERR AND RUN: CANOPEN COMMUNICATION STATE

The meaning of leds **ERR** and **RUN** is described below; refer to the *User Manual* for details about the possible state and the flashing modes of the two leds.

Led ERR (Red) Meaning

| N° | LED ERR (Red) | STATE | DESCRIPTION |
|----|---------------|-----------------------|---|
| 1 | Off | No error | The Device is in working condition. |
| 2 | Single flash | Warning limit reached | At least one of the error counters of the CAN controller has reached or exceeded the warning level (too many error frames). |
| 4 | Double flash | Error Control Event | A guard event (NMT-Slave or NMT-master). |
| 5 | Triple flash | Sync Error | The SYNC message has not been received within the configured communication cycle period time out. |
| 6 | On | Bus off | The CAN controller is bus off. |

Led RUN (Green) Meaning

| N° | LED RUN (Green) | STATE | DESCRIPTION |
|----|-----------------|-----------------|---|
| 2 | Single flash | Stopped | The Device is in STOPPED state. |
| 3 | Blinking | Pre-Operational | The Device is in the PRE-OPERATIONAL state. |
| 4 | On | Operational | The Device is in the OPERATIONAL state. |

LEDS FAIL AND PWR: GENERAL SYSTEM DIAGNOSTICS

| LED PWR (Green) | Meaning | LED FAIL (Yellow) | Meaning |
|-----------------|------------------------|-------------------|---|
| On | Power Supply presence. | On/Blinking | -Data reception on the RS232 port (COM). -Fault: at least an output is in fault condition. |

LEDS 01..24: DIGITAL OUTPUTS STATE

| LEDS 01..24 (Green) | Meaning |
|---------------------|--|
| On | The corresponding output (01..24) is ON. |

Accessories

SUPPORTS FOR MOUNTING ON DIN RAIL GUIDE/ SERIAL CABLE

| Code | Description |
|--------------|--|
| Z-PC-DINAL-A | Bus Support: Terminal blocks + 2 slots to connect Z-PC line modules. |
| Z-PC-DINAL-B | Bus Support: Terminal blocks + 1 slot to connect Z-PC line modules. |
| Z-PC-DIN2-A | Bus Support: 2 slots to connect Z-PC line modules. |
| Z-PC-DIN2-B | Bus Support: 1 slot to connect Z-PC line modules. |
| Z-PC-DIN8-A | Bus Support: 8 slots to connect Z-PC line modules. |
| Z-PC-DIN8-B | Bus Support: 4 slots to connect Z-PC line modules. |
| PM001600 | Serial Cable: from 3,5 mm stereo Jack to DB9F. |



Disposal of Electrical & Electronic Equipment (Applicable throughout the European Union and other European countries with separate collection programs). This symbol, found on your product or on its packaging, indicates that this product should not be treated as household waste when you wish to dispose of it. Instead, it should be handed over to an applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences to the environment and human health, which could otherwise be caused by inappropriate disposal of this product. The recycling of materials will help to conserve natural resources. For more detailed information about the recycling of this product, please contact your local city office, waste disposal service or the retail store where you purchased this product.